






DIMENSIO	OTHERWISE SPECIF ONS ARE IN MILLIN ARE IN KILOGRAM	METERS			PART NUMBER / DWG NO.:  R\$125\$		
	NAME	SIGNATURE	DATE	REVISION			
DRAWN	M.Rebase		43.10.2023		DESCRIPTION:		
APPV'D					Climbing Frame GIBBON S		
Tiptiptap <sup>o0</sup>					MATERIAL: A4		
					WEIGHT:	SCALE: 1:50	SHEET 9 OF 21

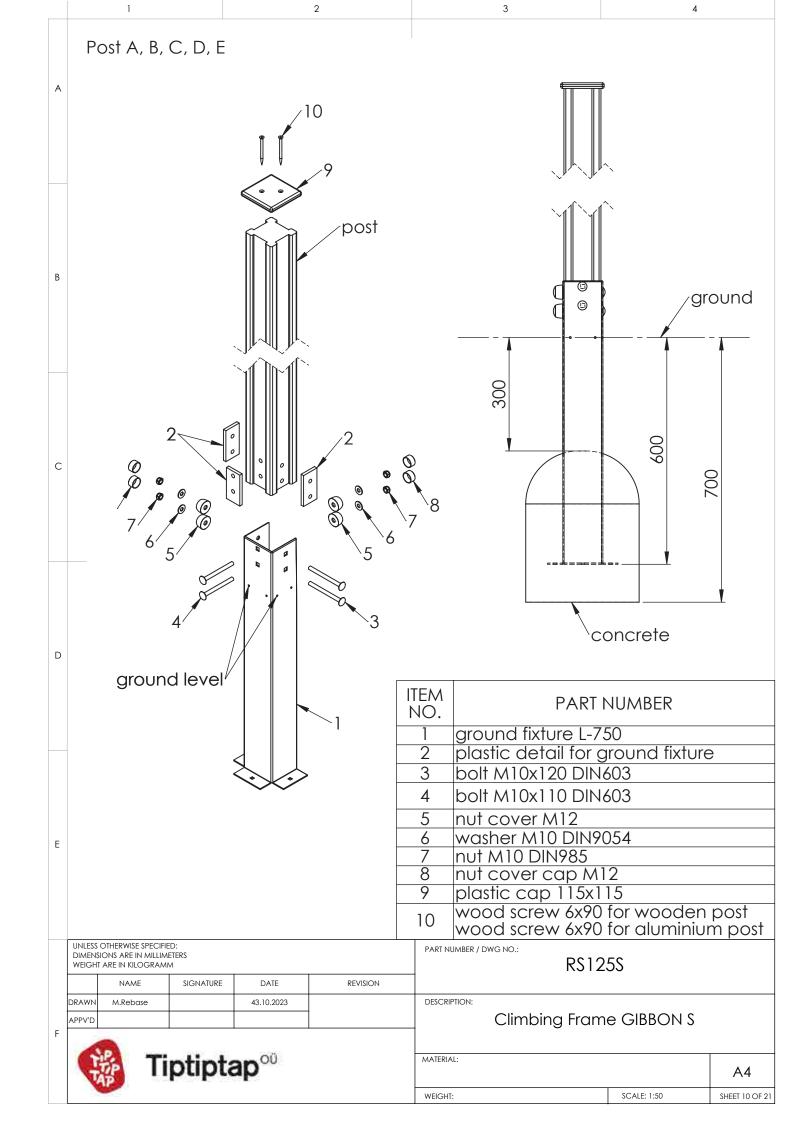


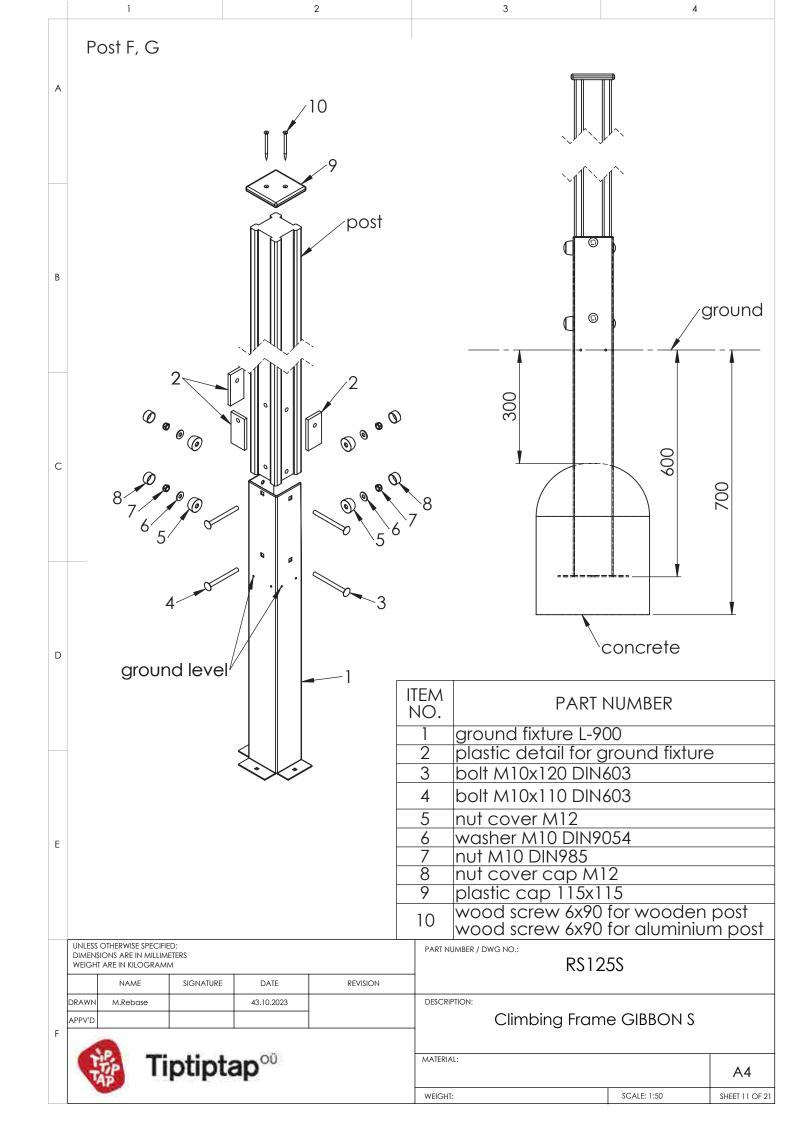


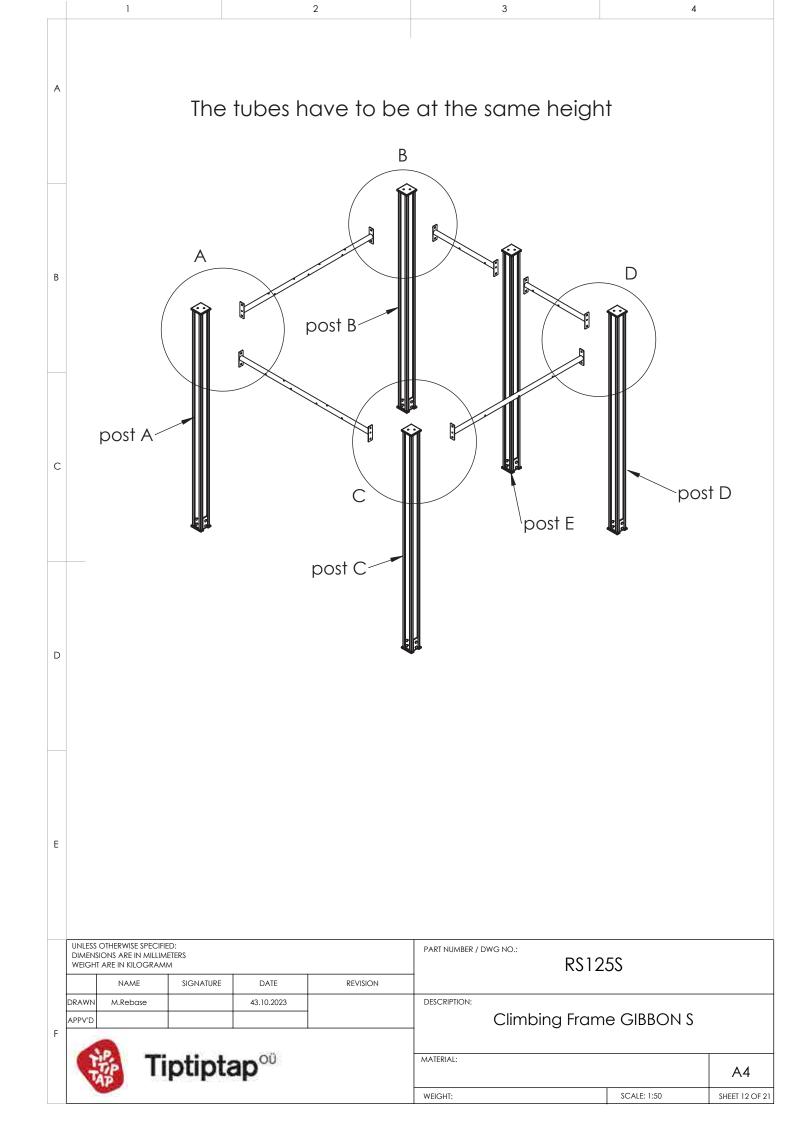


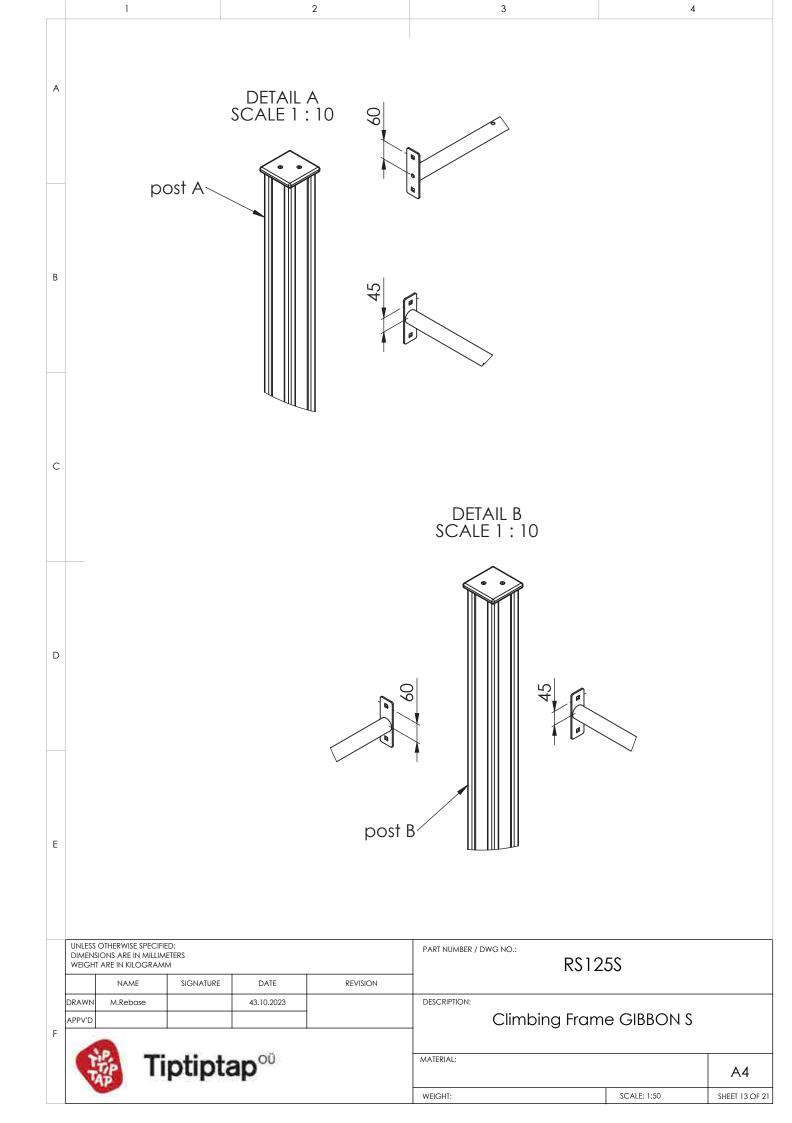


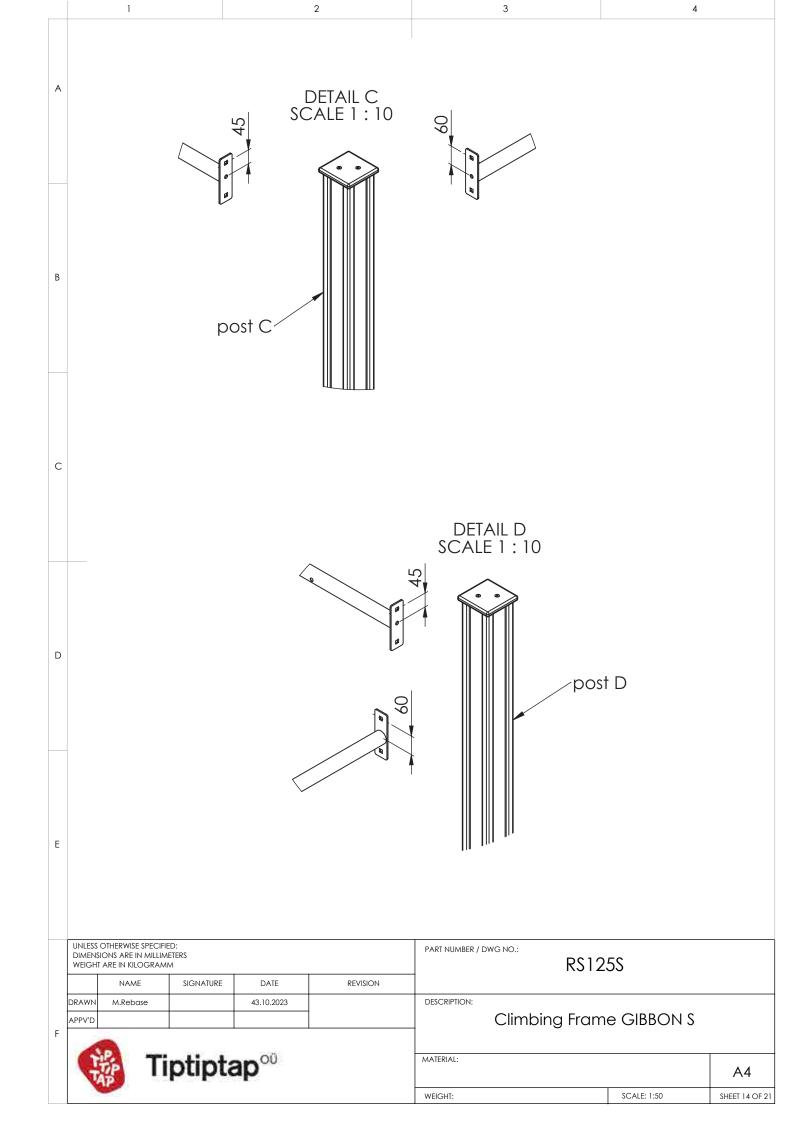


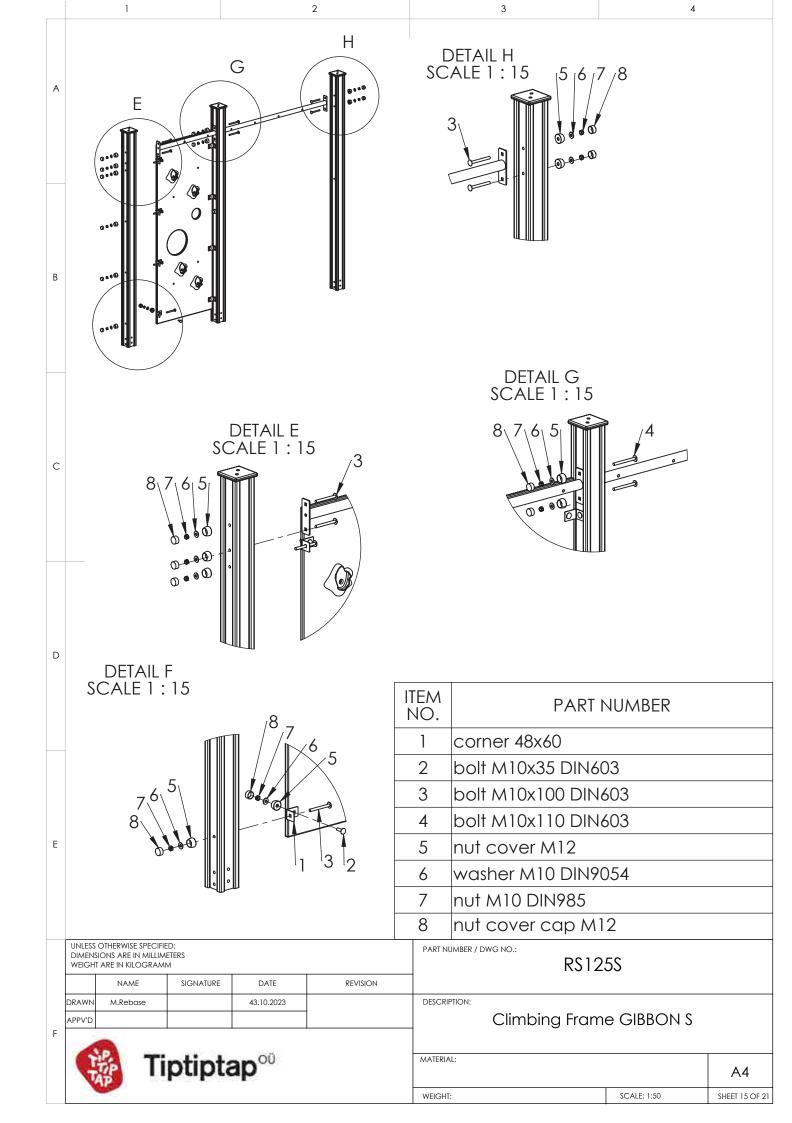


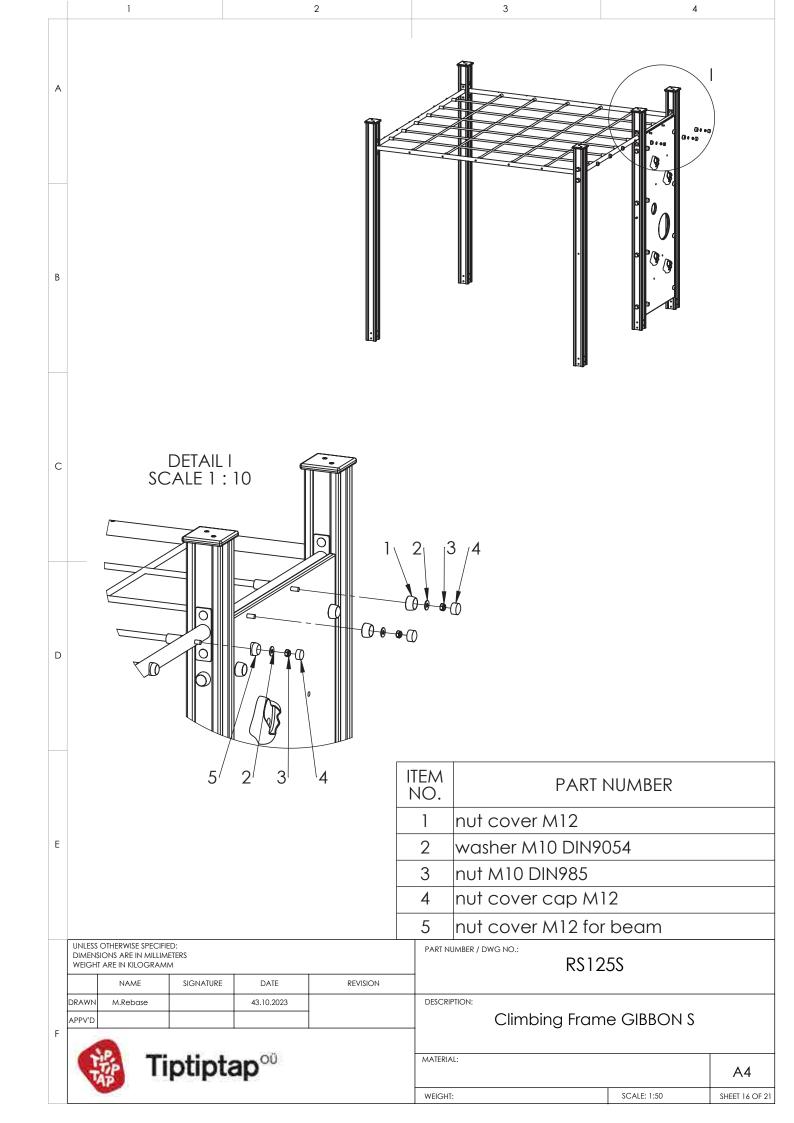

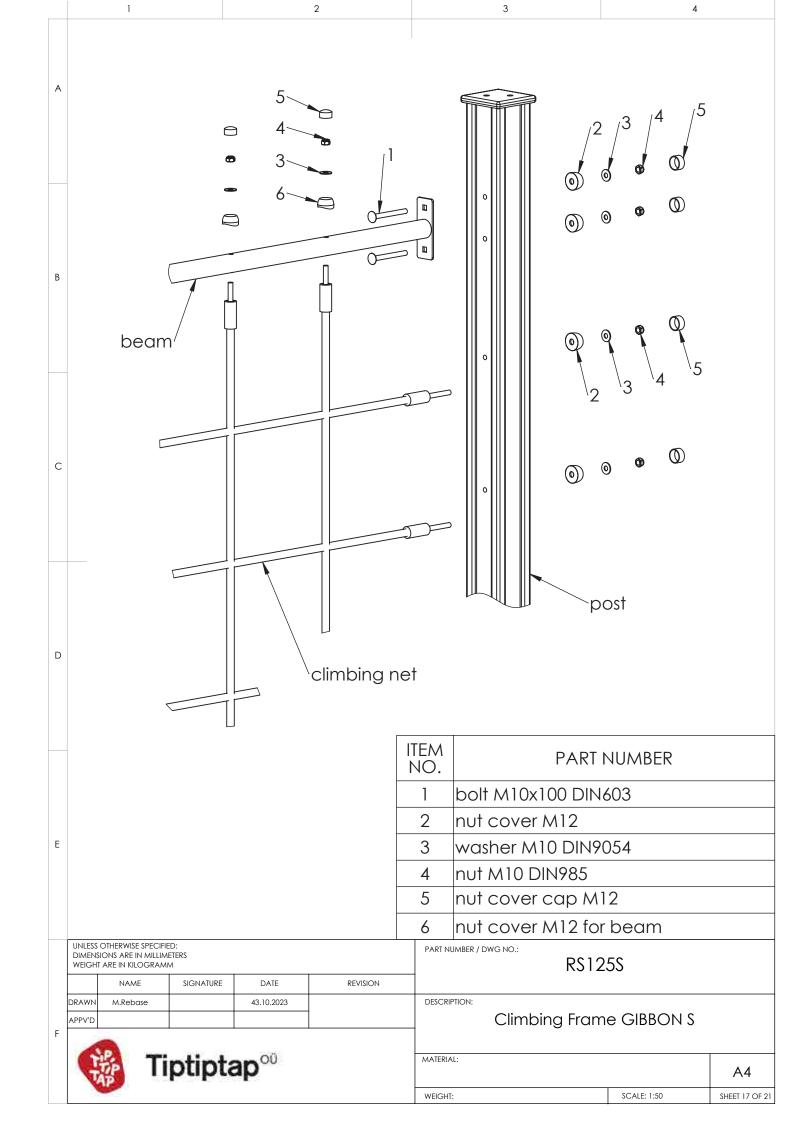

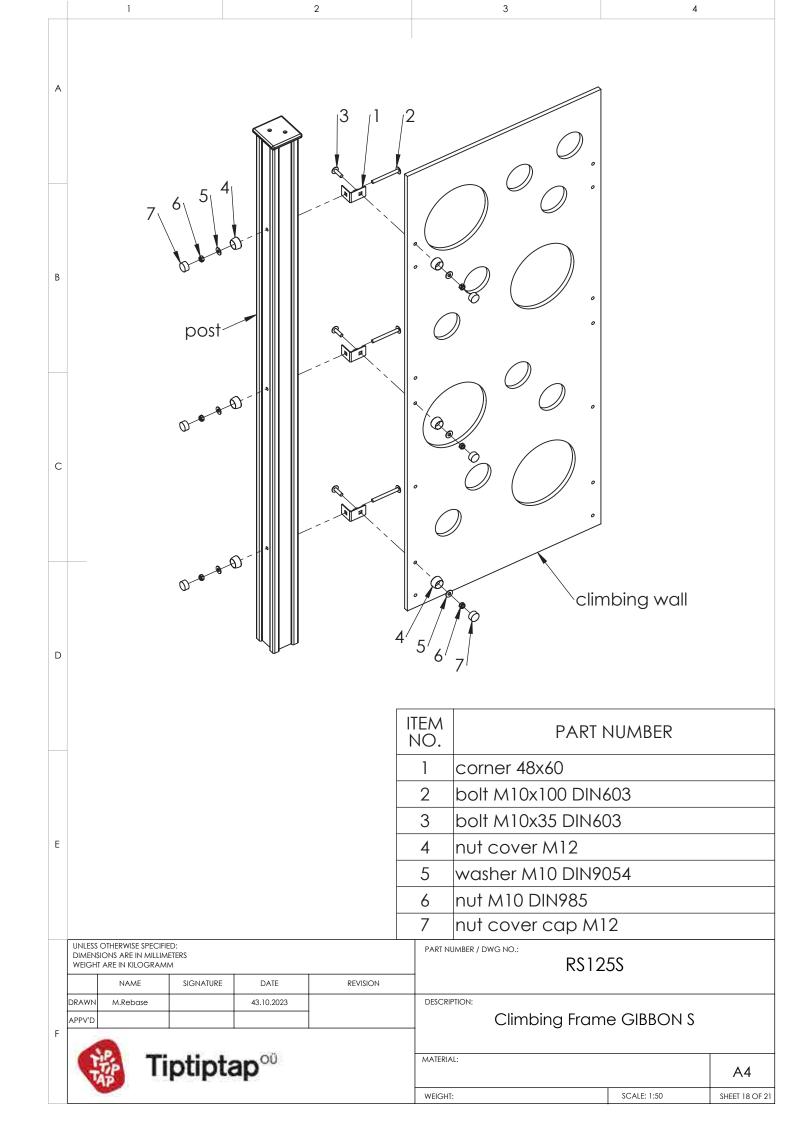

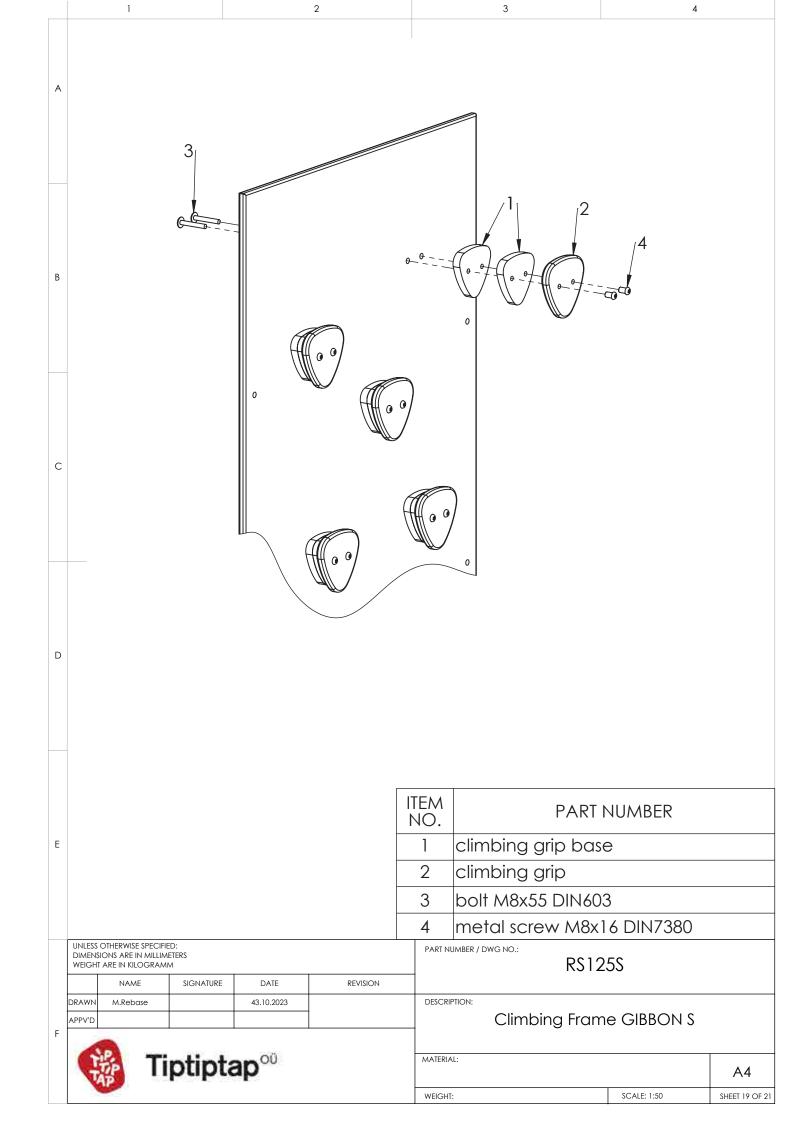

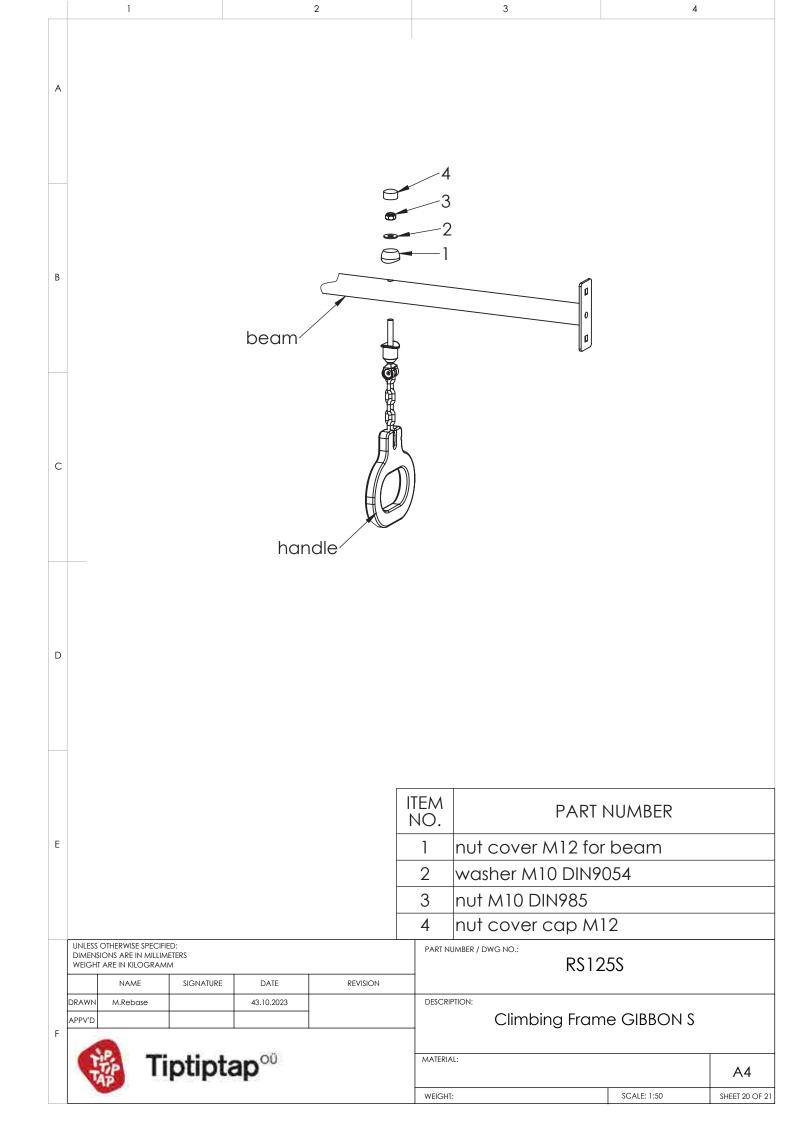

## Use of thread adhesive

Thread adhesive is nessesery to use in places where nut or bolt without lock is used.


## For instance:

С

Е

- 1) Bridges (with 3 or 8 steps)
- 2) OCTO series (Pin Trx nut)
- 3) All PP covered steel wire connections

Use of thread adhesive: add small drop of thread adhesive to the end of the bolt or nut thread.

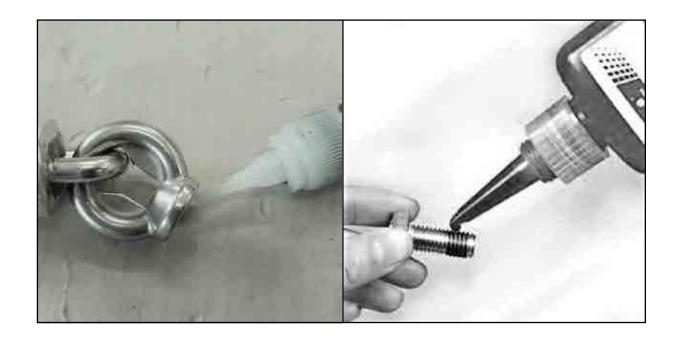

	DIMENS	OTHERWISE SPECIFI SIONS ARE IN MILLIM T ARE IN KILOGRAM	NETERS			PART NUMBER / DWG NO.:  R\$125\$	
		NAME	SIGNATURE	DATE	REVISION		
	DRAWN	M.Rebase		43.10.2023		DESCRIPTION:	
	APPV'D					Climbing Frame GIBBON S	
F	Tiptiptap <sup>o0</sup>						
						MATERIAL:	

WEIGHT:

SCALE: 1:50

SHEET 21 OF 21

